PREMIER®

MANUAL DE INSTRUCCIONES

MANUAL DE INSTRUCCIONES

MW-1520

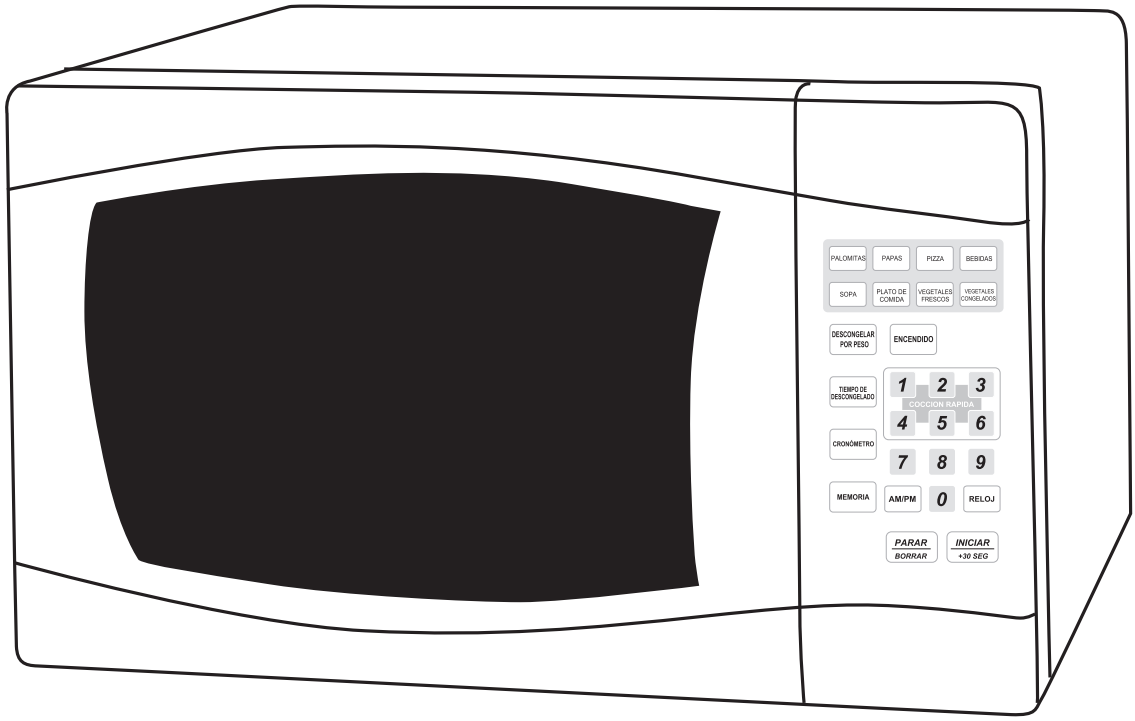

ESTIMADO CLIENTE

Felicitaciones por su compra!
Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

MEDIDAS DE PRECAUCION PARA EVITAR LA POSIBLE
EXPOSICION A LA EXCESIVA ENERGIA DEL HORNO DE MICROONDAS.

a. No intente usar este horno mientras la puerta esté abierta pues puede dar lugar a la exposición dañina de energía de microondas. Es importante que no intente pasar por alto o desactivar las medidas de seguridad.
b. No coloque objetos que obstruyan el abrir o cerrar la puerta; tampoco deje que se acumulen residuos de deshechos o detergente alrededor de la puerta.
c. No use el horno si está destrozado. Es muy importante que la puerta del horno esté bien cerrada y no hayan daños a :
- la puerta (magulladuras)
- bisagras o seguros (sueltos o rotos)
- sello de la puerta
d. No debe reparar o hacer ajustes a la puerta, con la excepción de personal calificado.

ESPECIFICACIONES

Modelo	MW-1520
Generador de energía	120V~ 60Hz
Consumo de energía	1050W
Salida máxima	700W
Capacidad del horno	20 L
Diámetro de la torna-mesa	Ø 245mm
Dimensiones (largo, ancho, alto)	461X365X280mm
Peso neto	Aprox. 11.4 Kg

SEGURIDAD

1. El horno debe ser colocado en una superficie nivelada
2. La torna-mesa y el descanso de la torna-mesa debe permanecer en el horno mientras cocina. Coloque los utensilios para cocinar en el horno con cuidado, así mismo tenga cuidado al manejarlos para evitar que se rompan.
3. El uso inapropiado de recipientes para dorar puede causar que el torna-mesa se rompa.
4. Use la bolsa del tamaño especificado cuando use la función para preparar las palomitas de maíz.
5. El horno tiene varios controles de seguridad incorporados para asegurar que la energía se apague al abrir la puerta. No atente contra estos controles.
6. No opere el horno mientras está vacío. El uso del horno sin comida o comida con contenido bajo en humedad puede causar incendios, chispas o que se quemen.
7. No cocine el tocino directamente en la torna-mesa. El calor excesivo puede causar que el plato se rompa.
8. No caliente biberones/mamilas o comida para bebés en el horno de micro-ondas. Puede que no se caliente uniformemente y cause daños físicos.
9. No caliente recipientes de cuello angosto, como por ejemplo: botellas de jarabe para pan queques.
10. No trate de freír comida en el horno.
11. No trate de envasar productos en este horno pues es imposible asegurarse que el frasco haya llegado al punto de ebullición.
12. Este horno no es para uso comercial.

13. Para prevenir que los líquidos le salpiquen al hervir, se sugiere que mueva el líquido antes de colocar el recipiente en el horno y repita la acción una vez llegue a la mitad del tiempo programado. Deje descansar en el horno por un corto lapso y mueva nuevamente antes de sacar el recipiente.
14. Por favor esté atento a la comida en el horno para evitar que se queme si se somete a largo tiempo de cocción.
15. Los niños pueden usar el horno solamente bajo la supervisión de un adulto, debido a las altas temperaturas generadas.
16. La imprudencia de no mantener el horno en condición limpia puede ocasionar daños a la superficie que a su vez afecta el funcionamiento del horno pudiendo causar situaciones de peligro.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

ADVERTENCIA. Siga las siguientes recomendaciones básicas para reducir el riesgo de incendio, descarga eléctrica, exposición a energía excesiva de micro-ondas al usar esta unidad.

1. Lea las instrucciones antes de usar la unidad.

2. Lea y siga las instrucciones específicas: “PRECAUCIONES PARA EVITAR LA POSIBLE EXPOSICIO A LA ENERGIA EXCESIVA DE MICRO-ONDAS”

3. Así como con los demás artefactos de cocina se requiere supervisión para reducir el riesgo de incendio en la cavidad del horno.

Si se produce un incendio:

- Mantenga la puerta del horno cerrada.
- Apague el horno y desenchufe la unidad.
- Desconecte la energía del panel de fusibles.

Siempre tenga en cuenta las siguientes reglas:

1. No sobre-cocine la comida. Supervise el horno si se usan recipientes de papel, plástico u otro material combustible, para facilitar la cocción.
2. No use el horno como alacena. No guarde cosas combustibles como ser: pan, galletas, productos de papel, etc.; si acaso llega un relámpago a los cables de alta tensión el horno se puede encender solo.
3. Quite los seguros de metal o plástico de recipientes o bolsas antes de colocarlos en el horno.
4. Este horno debe tener conexión a tierra. Conecte solamente a un tomacorriente que tenga esta disposición. Vea las instrucciones para la conexión a tierra.
5. Solamente instale o ubique este horno de acuerdo a las instrucciones provistas.
6. Algunos productos como ser huevos, agua, aceites o grasas, recipientes sellados y frascos cerrados pueden explotar por lo tanto no se deben calentar en este horno.
7. Solamente use este artefacto para los usos descritos en el manual. No use substancias químicas corrosivas en este horno. Este horno 5 está diseñado específicamente para cocinar o calentar comida. No está diseñado para uso industrial o de laboratorio. 7. Como con cualquier otro artefacto, debe supervisar cuando sea usado por niños 8. No use esta unidad si el cable está dañado, si la unidad se hubiese caído o no esté funcionando normalmente. 9. Acuda solamente a personal calificado en caso de necesitar reparaciones.
8. 10. No bloquee los orificios del horno.
9. No use o guarde este horno en el patio.
10. No use esta unidad cerca del agua, cerca de un lavadero, sótano húmedo o cerca de una piscina.

11. No sumerja el enchufe en el agua.
12. Mantenga el cable lejos de las superficies calientes.
13. No deje que el cable cuelgue al borde de la mesa o mesón de la cocina.
14. Use solamente detergente suave aplicado con una esponja o paño suave para limpiar el horno.
15. Los líquidos como ser: agua, café, o té pueden calentarse más allá del punto de ebullición aunque no parezca así a simple vista. La ebullición tampoco se nota cuando se saca el recipiente del horno. TENGA CUIDADO CON LOS LIQUIDOS CALIENTES QUE AL HERVIR DERRAMAN SU CONTENIDO O SE REMUEVEN CON CUCHARAS U OTROS UTENSILIOS.

Para reducir el riesgo de peligro vea que:

- No sobrecaliente los líquidos
- Mueva los líquidos antes y también a la mitad del tiempo fijado.
- No use recipientes de boca angosta.
- Al calentar, deje que el recipiente permanezca en el horno aunque sea por un corto tiempo antes de sacarlo del horno.
- Tenga mucho cuidado cuando introduzca una cuchara o utensilio en el recipiente.

CONEXIÓN A TIERRA

PELIGRO: Riesgo de descarga eléctrica. El tocar algunos de los componentes internos puede causar serios danos personales o incluso la muerte. No desarme la unidad.

ADVERTENCIA: Riesgo de descarga eléctrica. El uso inapropiado de la conexión a tierra puede resultar en corto circuito. No enchufe en un tomacorriente a no ser que esté debidamente instalado con conexión a tierra.

Enchufe de 3 hojas (conexión a tierra)

Enchufe correctamente polarizado con conexión a tierra. Esta unidad debe estar tener conexión a tierra. En caso de un corto circuito, este tipo de conexión reduce el riesgo de descarga eléctrica al proveer un escape para la electricidad. Esta unidad está equipada con un cable que tiene el cable para tierra y la tercera hoja en el enchufe; el enchufe se debe enchufar a un tomacorriente debidamente instalado para este propósito.

Si no entiende las instrucciones de la conexión a tierra o tiene dudas le sugerimos consulte con un técnico. Si es necesario usar un cable de extensión, use uno con 3 cables, que tenga el enchufe correcto y que el tomacorriente tenga los 3 orificios.

- Esta unidad está provista con un cable corto para reducir el riesgo de enredo o tropiezos.
- Si se usa un cable de extensión asegúrese que sea el apropiado para usar con la unidad. Que tenga 3 cables. Asegúrese que el cable no cuelgue sobre la mesa donde niños puedan jalar o tropezar accidentalmente.

ADVERTENCIA; Peligro de sufrir daños físicos. Los recipientes herméticamente cerrados pueden explotar. Debe abrir los recipientes cerrados y perforar las bolsas plásticas.

Vea la página a continuación para mayores detalles acerca de tipo de materiales que puede o no usar en el horno de micro-ondas. Hay ciertos utensilios no metálicos que se pueden usar con el horno. Si tiene dudas, usted puede probar el utensilio al seguir el procedimiento a continuación.

- Llene un recipiente a prueba de horno micro-ondas con una copa de agua fría y coloque el utensilio dentro.
- Cocine a máxima energía por 1 minuto.
- Saque el utensilio con cuidado. Si el utensilio está tibio no debe usarlo en el horno de micro-ondas.
- No sobrepase el minuto.

MATERIALES QUE SE PUEDEN USAR EN EL HORNO DE MICRO- ONDAS

Utensilio	**Comentarios**
Papel aluminio	solamente para protección. Se puede usar pedazos pequeños para cubrir partes delgadas de carne para prevenir que se sobre cocine. Puede que el aluminio se doble si este en contacto con las paredes del horno. El papel debe estar apartado a por lo menos 2.5cm de las paredes del horno.
Platos para dorar	Siga las instrucciones del fabricante. El fondo del plato para dorar debe estar a por lo menos 5mm (1/16 pulgadas) del torna-mesa. El uso incorrecto puede ocasionar que el plato se rompa.
Vajilla	Use solamente utensilios a prueba de micro-ondas. Siga las instrucciones del fabricante. No use platos rajados o desportillados.
Frascos de vidrio	Siempre quite la tapa. Use solamente para entibiar la comida. La mayoría de los frascos no son resistentes al calor y se pueden romper.
Vasos	Use vasos resistentes al calor solamente. Asegúrese que no tengan bordes metálicos. No use vasos rajados o desportillados.
Bolsas para cocinar	Siga las instrucciones del fabricante. No use alambre para cerrar las bolsas. Haga perforaciones para permitir que salga el vapor.
Platos y vasos desechables	Use solamente para calentar o cocinar por poco tiempo. No deje el horno sin supervisión.
Toallas de papel	òselas para cubrir la comida al calentar y para absorber la grasa. No deje el horno sin atención y use solamente para cocinar por corto tiempo.
Papel encerado	Úselo para cubrir los recipientes, prevenir salpicaduras o envolver para cocinar al vapor.
Plástico	Use plástico que sea a prueba de microondas solamente. Siga las instrucciones del fabricante. Algunos recipientes plásticos se derriten cuando la comida se calienta. Siempre haga perforaciones a las bolsas cerradas para que salga el vapor.
Envoltura plástica	Use solamente los que sean a prueba de micro-ondas. Use para cubrir la comida mientras cocina para retener la humedad. No permita que el plástico entre en contacto con la comida.
Termómetros	Use solamente los que son a prueba de micro-ondas (termómetros para carnes y azúcar)

MATERIALES QUE DEBE EVITAR EN EL HORNO DE MICRO-ONDAS

Utensilios	Comentarios
Bandejas de aluminio	Pueden doblarse. Ponga la comida a un plato a prueba de micro-ondas.
Recipientes de papel con Agarradores de metal	Pueden doblarse. Ponga la comida a un plato a prueba de micro-ondas.
Utensilios de metal o con Bordes metálicos	El metal absorbe la energía del micro- ondas. Los utensilios pueden doblarse.
Aseguradores metálicos	Pueden doblarse e incendiarse en el horno.
Bolsas de papel	Pueden incendiarse en el horno.
Plastoformo	Puede derretirse o contaminar el contenido si se expone a altas temperaturas.
Madera	La madera se seca cuando se usa en el horno de micro-ondas y es posible que se raje o parta.

DIPOSICION DEL HORNO DE MICRO-ONDAS

Accesorios

Saque el artefacto y accesorios del cartón.
Los siguientes accesorios vienen incluidos con el horno

Bandeja de vidrio	1
Anillo para ensamblar el torna-mesa	1
Manual de instrucciones	1

PARTES DEL HORNO DE MICRO-ONDAS

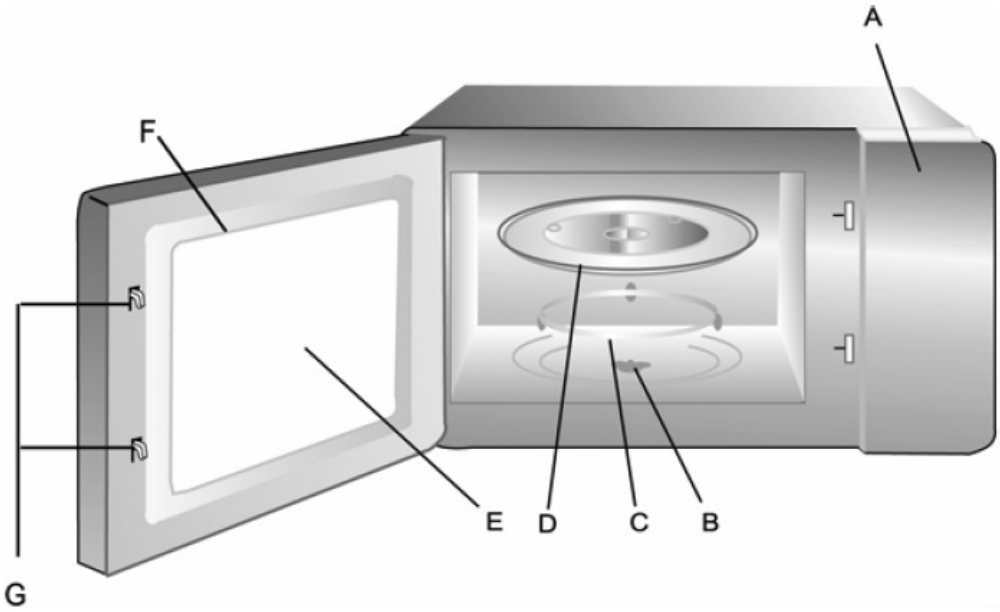

A. Panel de control
B. Encastre del torna-mesa
C. Ensamblaje del anillo del torna-mesa
D. Bandeja de vidrio
E. Ventana
F. Ensamblaje de la puerta
G. Sistema de seguridad

INSTALACIÓN DE LA TORNA-MESA

a) Nunca ponga la bandeja de vidrio al revés. No debe impedir el movimiento de la bandeja de vidrio.
b) Tanto la bandeja de vidrio como el anillo de ensamblaje se deben usar al cocinar.
c) Siempre coloque los recipientes con comida encima de la bandeja de vidrio.
d) Si el anillo de ensamblaje o la bandeja de vidrio se raja o rompe debe contactar a su centro de servicio autorizado.

INSTALACION

Una vez desempaque la unidad, revise para ver si no hay hendiduras o si la puerta está rota. No instale si el horno está dañado.

Encima del mesón de la cocina Gabinete:

Quite la capa protectora que se encuentra en la superficie del gabinete. No quite la cubierta café de mica que está pegada a la cavidad del horno para la protección del magnetron.

1. Ubique en un lugar donde haya suficiente espacio abierto para la circulación de aire.

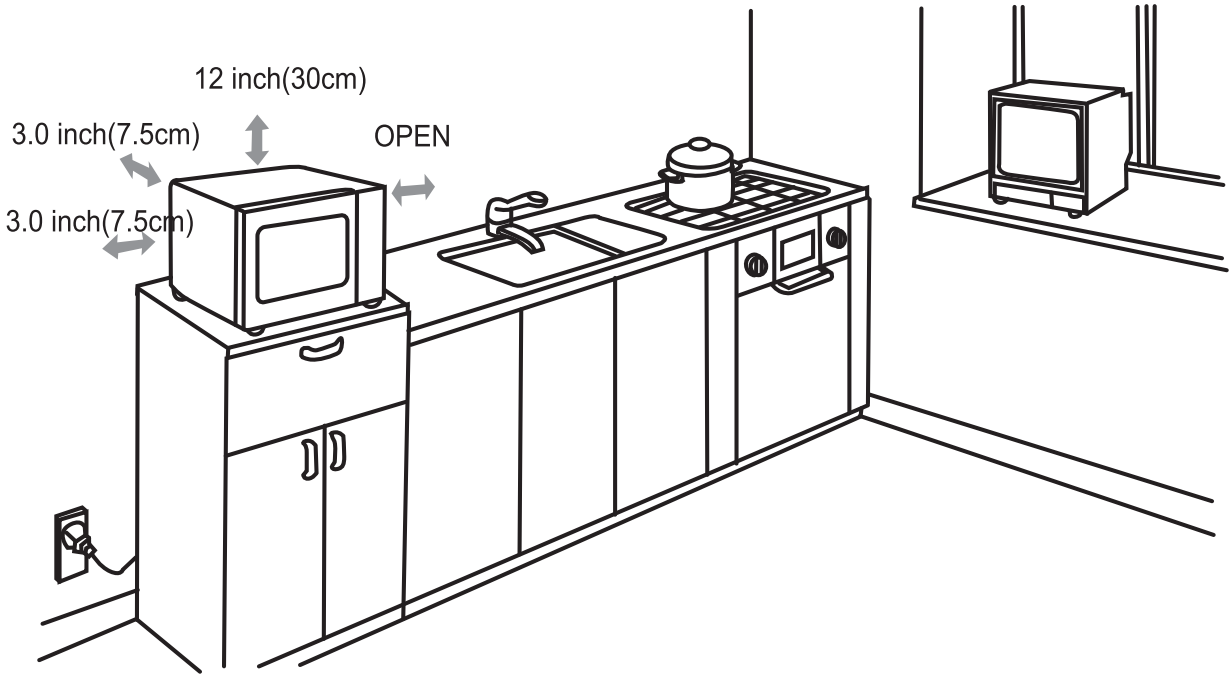

Se requiere un mínimo de 7.5cm (3 pulgadas) de espacio entre el horno y la pared más cercana. Uno

de los lados debe estar abierto.

- Deje un mínimo de 30cm de espacio por encima del horno.
- No quite las patas de la base del horno.
- El horno se puede dañar si se obstruyen las aberturas del horno.
- Ubique el horno de micro-ondas lo más lejos posible de radios y televisores. Puede que la operación del esta unidad cause interferencia a la recepción de radio o la televisión.

2 Enchufe la unidad a un tomacorriente normal. Asegúrese que el voltaje y la frecuencia sean las mismas que el voltaje y la frecuencia en la etiqueta de información.

ADVERTENCIA
No instale el horno de micro-ondas encima de la estufa u otro artefacto que produzca calor. Si se instala de esta manera el horno se puede dañar y anular la garantía.

PANTALLA DE INFORMACION

(1) DESCONGELAR POR PESO
(2) TIEMPO DE DESCONGELADO
(3) CRONÓMETRO
(4) MEMORIA
(5) AM/PM
(6) PARAR/BORRAR
(7) Auto Menu
(8) ENCENDIDO
(9) Number keys
(10) RELOJ
(11) INICIAR/+30SEG.

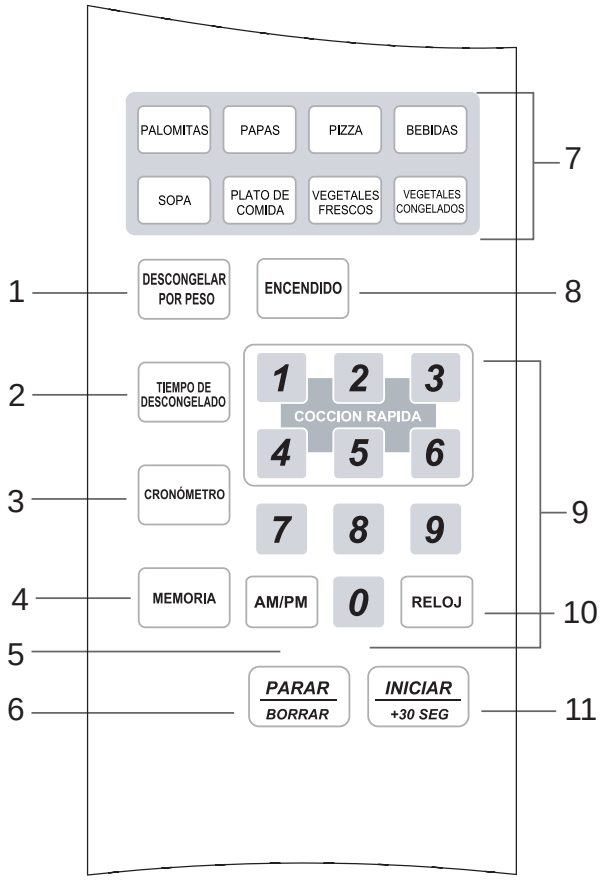

INSTRUCCIONES DE OPERACIÓN

1 NIVEL DE ENERGÍA Hay 10 niveles para seleccionar. Oprima "Encendido" varias veces para cambiar el nivel.

Nivel	10	9	8	7	6	5	4	3	2	1
Energía	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%

Cuando se escoge un nivel de energía de 8-10, el nivel mayor se encenderá y se mantendrá intermitente mientras esté en uso.
Cuando se escoge un nivel de energía de 7-1, el nivel bajo se encenderá y se mantendrá intermitente mientras esté en uso

2 DISPOSICION DEL RELOJ

Una vez enchufe la unidad la pantalla mostrará "0:00"
- Oprima **Reloj** y la pantalla mostrará 00:00. Los dígitos correspondientes a la hora brillarán; ":" y "0" se encenderán.
- Oprima los botones numerales e ingrese la hora correcta. Por ejemplo si son las 10:12, oprima "1,0,1,2"
- Oprima "**AM/PM**" para seleccionar entre AM o PM
- Oprima **Reloj** para finalizar la disposición de la hora, el indicador del reloj mostrará ":" brillando y la hora encendida.
- Si los números ingresados no están dentro del rango de 1:00 a 12:59, la disposición se invalidará hasta que se corrija.

Nota: En el proceso para ajustar el reloj, si se presiona "**PARAR/BORRAR**" o no se efectúa ninguna operación en un minuto, la unidad volverá al estado previo automáticamente.

3. DESPERTADOR DE COCINA.
1) Oprima "**CRONÓMETRO**", se ve en el LED 00:00, el indicador de tiempo se enciete.
2) Oprima los números para entrar el tiempo correcto.(El máximo del tiempo es 99minutos y 99 segundos)
3) Oprima "**INICIAR/+30SEG**." para confirmar, el indicador de tiempo se enciente.
4) 5 buzzers se oyeran cuando llega al tiempo ajustado.

4 PARA COCINAR EN UN PASO
- Oprima **ENCENDIDO** para escoger el nivel de energía. Los indicadores de **MICRO** y **ENCENDIDO** se encenderán al mismo tiempo.
- Oprima los botones numerales para poner el tiempo de cocción. El máximo tiempo permitido es 99min 99 seg.
- Oprima **INICIAR/+30 SEG.** para comenzar a cocinar; la pantalla mostrará el tiempo que queda por cocinar. Los indicadores ":", MICRO y ENERGIA se encenderán intermitentemente.

5 PARA COCINAR EN 2 PASOS
- Oprima **ENCENDIDO** para escoger el nivel de energía. Los indicadores de MICRO y ENCENDIDO

se encenderán al mismo tiempo.
- Oprima los botones numerales para poner el tiempo de cocción. El máximo tiempo permitido es 99min 99 seg.
- Continúe presionando **ENCENDIDO** para seleccionar el nivel 2. Los indicadores MICRO y ENCENDIDO se encenderán intermitentemente.
- Oprima los botones numerales para poner el tiempo del Segundo paso. El máximo tiempo permitido es 99min 99 seg.
- Oprima **INICIAR/+30SEG.** para comenzar a cocinar; la pantalla mostrará el tiempo que queda por cocinar. Los indicadores ":", MICRO y ENCENDIDO brillarán.
- Oirá un timbre una vez se termine la hora de cocción del primer paso y dará inicio el segundo.

6. CONMIENZO RÁPIDO

1) Se puede empezar inmediatamente una cocción con 100% potencia de 1 a 6 minutos con prestar el numero corresponde y Oprima el numero y confirmar con restar "**INICIAR /+30SEG.".**

2) Se puede empezar inmediatamente una cocción con 100% potencia de 30 segundos con prestar **"INICIAR /+30SEG.".** Cada oprima se ingresa el tiempo de cocción por 30 segundos.

7 FUNCION PARA DESCONGELAR POR PESO

1. Oprima "**DESCONGELAR POR PESO**" y la pantalla mostrará "dEF1", al mismo tiempo se encenderán los indicadores "Micro" y "Descongelar"
2. Ingrese el peso de lo que va a descongelar por medio de los botones numerales. El indicador "Oz" se encenderá. El peso debe estar entre 4 a 100 onzas.
3. Si el peso es mayor al rango anterior, la entrada se invalidará. Un timbre le alertará para que ingrese un número válido.
4. Oprima "**INICIAR/30SEG.**" para comenzar a descongelar. La información con el tiempo restante aparecerá en la pantalla. Los indicadores ":", "Micro" y "Descongelar" parpadearan mientras que el indicador "Oz" se apagará.

8 FUNCION PARA DESCONGELAR POR TIEMPO

1 Oprima "TIEMPO DE DESCONGELADO" y la pantalla mostrará "dEF2". Al mismo tiempo se encenderán los indicadores "Micro" y "Descongelar"

2 Ingrese el tiempo que necesita para descongelar por medio de los botones numerales. El tiempo debe estar entre 00:01 – 99:99.

3 El nivel de energía fijado inicialmente es 3. Si desea cambiar el nivel de energía oprima "**Encendido**" una vez y la pantalla mostrará "PL3", luego ingrese el nivel de energía que desee.

4 Oprima "**INICIAR/+30SEG.**" para comenzar a descongelar. La información con el tiempo restante aparecerá en la pantalla. Los indicadores ":", "Micro" y "Descongelar" se encenderán intermitentemente.

9 PALOMITAS DE MAIZ

No use este botón si el tamaño de la bolsa de palomitas de maíz es de menos de 50 gramos (1.75 oz.)

- Oprima “Palomitas” varias para seleccionar las opciones de la tabla a continuación.
- Oprima “**INICIAR/+30SEG**.” para comenzar a cocinar.

Oprima “Palomitas”	Peso	Ventana de información
Una vez	1.75 Oz	
Dos veces	3.0 Oz	
Tres veces	3.5 Oz	

10 PAPAS

- Oprima “Papas” varias veces hasta que aparezca el número que desea en la pantalla.
  Use la posición “1 Set” hasta 8.0 onzas (230g)
  Use la posición “2 Set” hasta 16.0 onzas (460g)
  Use la posición “3 Set” hasta 24.0 onzas (690g)
  Por ejemplo, al oprimir “PAPAS” una vez apa recerá el indicador “1”
- Oprima “**INICIAR/+30SEG**.” para cocinar.

Oprima “PAPAS”	**Peso**	**Ventana de información**
Una vez	1 SET	
Dos veces	2 SET	
Tres veces	3 SET	

11 PIZZA
- Oprima “PIZZA” varias veces en la pantalla. Se pueden calentar de 1 (Aproximadamente 85g)

Oprima “Pizza”	Peso	Ventana de información
Una vez	3.0 Oz	
Dos veces	6.0 Oz	
Tres veces	9.0 Oz	

Por ejemplo oprima “Pizza” dos veces y el indicador “2” aparecerá en el indicador.
- Oprima “**INICIAR/+30SEG**.” para cocinar. Un timbre le hará saber cuando se termine de cocinar.

12 BEBIDAS
- Oprima “BEBIDAS” varias veces hasta que aparezca el número que desea en la pantalla. Se pueden calentar de 1 a 3 tazas de bebidas de una vez (aproximadamente 250ml) Por ejemplo oprima “**Bebidas**” dos veces y el indicador “2” aparecerá en la pantalla.
- Oprima “**INICIAR/+30SEG**.” para cocinar.
- Varios timbres le harán saber cuando el tiempo termine

Oprima “BEBIDAS”	Peso	Ventana de información
Una vez	1	
Dos veces	2	
Tres veces	3	

13 SOPA （SOUP）

a) Oprima “SOPA” repetidamente hasta que numero que quiere aparezca en el LED. Por ejemplo, oprima “SOPA” dos veces, “8.0”aparecerá en el LED.

b) Oprima “**INICIAR/+30SEG**.”para empezar a cocer.

Oprima “SOPA”	**Peso**	**Ventana de información**
Una vez	4.0 Oz	
Dos veces	8.0 Oz	
Tres veces	12.0 Oz	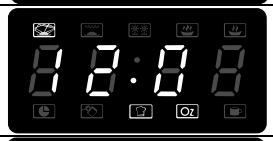
4 veces	16.0Oz	

14 PLATOS

- Oprima “PLATO DE COMIDA” varias veces hasta que aparezca el número que desea en la pantalla. Por ejemplo oprima “PLATO DE COMIDA” dos veces y el indicador “12.0” aparecerá en la pantalla.
- Oprima “**INICIAR/+30SEG**.” para cocinar. Varios timbres le harán saber cuando se termine el tiempo.

Oprima “PLATO DE COMIDA”	**Peso**	**Ventana de información**
Una vez	9.0 Oz	
Dos veces	12.0 Oz	
Tres veces	18.0 Oz	

15 VEGETALES FRESCOS

- Oprima “VEGETALES FRESCOS” varias veces hasta que aparezca el número que desea en la pantalla.

Use la posición “1 Set” hasta 4.0 onzas
Use la posición “2 Set” hasta 8.0 onzas
Use la posición “3 Set” hasta 16.0 onzas

Por ejemplo oprima “VEGETALES FRESCOS” dos veces y el indicador “8.0” aparecerá en la pantalla.

- Oprima “**INICIAR/+30SEG**.” para cocinar. Varios timbres le harán saber cuando se termine el tiempo

Oprima “VEGETALES FRESCOS”	**Peso**	**Ventana de información**
Una vez	4.0 Oz	
Dos veces	8.0 Oz	
Tres veces	16.0 Oz	

16 VEGETALES CONGELADOS

- Oprima “VEGETALES CONGELADOS” varias veces hasta que aparezca el número que desea en la pantalla.

Use la posición “1 Set” hasta 4 onzas
Use la posición “2 Set” hasta 8 onzas
Use la posición “3 Set” hasta 16 onzas

Por ejemplo oprima “VEGETALES CONGELADOS” dos veces y el indicador “8.0” aparecerá en la pantalla.

- Oprima “**INICIAR/+30SEG**.” para cocinar. Varios timbres le harán saber cuando se termine el tiempo.

Oprima “VEGETALES CONGELADOS”	**Peso**	**Ventana de información**
Una vez	4.0 Oz	
Dos veces	8.0 Oz	
Tres veces	16.0 Oz	

17 FUNCION DE MEMORIA

Hay 5 disposiciones de memoria que puede almacenar de acuerdo a sus necesidades.
Para fijar la memoria:
1 Oprima “MEMORIA” varias veces para seleccionar una de ellas.
2 Siga las instrucciones de uno de los métodos a continuación:

Método A. Si se necesita para cocinar en un paso

- Oprima “ENCENDIDO” varias vec es para seleccionar el nivel que desee.
- Use los botones numerales para ingresar el tiempo requerido. El máximo tiempo permitido es de 99min y 99seg.

Método B. Si se necesita para cocinar en 2 pasos

- Oprima “ENCENDIDO” varias veces para seleccionar el nivel que desee.
- Use los botones numerales para ingresar el tiempo requerido para el primer paso
- Oprima “ENCENDIDO” varias veces para seleccionar el nivel que desee para la segunda fase.
- Use los botones numerales para ingresar el tiempo requerido para el segundo paso

Método C. Si se necesita para descongelar por tiempo

- Oprima “TIEMPO DE DESCONGELAR”. La pantalla mostrará “dEF2”
- Use los botones numerales para ingresar el tiempo requerido. El rango del tiempo permitido es entre 00:01 – 99:99
- Oprima “ENCENDIDO” varias veces si desea cambiar el nivel de energía. El nivel de energía fijado en fábrica es 3.

3 Oprima “MEMORIA” para almacenar las disposiciones
4 Repita los pasos 1, 2 y 3 para otra selección.

Como usar la función de memoria

La memoria se debe fijar antes de comenzar a cocinar de otra manera la
función no se activará.
1 Oprima “MEMORIA” varias veces para seleccionar una de las 5 memorias almacenadas.
2 Oprima “**INICIAR/+30SEG**.” para comenzar a cocinar. Un timbre sonará varias veces una vez se termine el tiempo.

18 TEMPORIZADOR

* El temporizador no funciona para descongelar alimentos.
* Debe fijar el reloj antes de usar el temporizador.

1 Siga uno de siguientes métodos

Método A. Para fijar el temporizador para cocinar en un paso.

- Oprima “ENCENDIDO” varias veces para seleccionar el nivel que desee.
- Use los botones numerales para ingresar el tiempo requerido. El máximo tiempo permitido es de 99min y 99seg.
- No oprima “**INICIAR/+30SEG**.” hasta completar las instrucciones #2

Método B. Para fijar el temporizador para cocinar en 2 pasos

- Oprima "**ENCENDIDO**" varias veces para seleccionar el nivel que desee.
- Use los botones numerales para ingresar el tiempo requerido para el primer paso
- Oprima "**ENCENDIDO**" varias veces para seleccionar el nivel que desee para la segunda fase.
- Use los botones numerales para ingresar el tiempo requerido para el segundo paso
- No oprima "**INICIAR/+30SEG**." hasta completar las instrucciones #2

2 Oprima "**RELOJ**" para fijar la hora. La pantalla mostrará la hora en curso con los números encendidos intermitentemente.

3 Use los botones numerales para disponer la hora. Por ejemplo: si la hora en curso es 03:20 y quiere comenzar a cocinar a las 04:50, oprima '0', '4', '5', y '0'.

4 Oprima AM/PM para seleccionar uno de los 2. La disposición de fábrica es AM. La pantalla mostrará 'A' para AM o 'P' para PM.

5 Oprima "**INICIAR/+30SEG**." para confirmar la información del temporizador. El indicador del temporizador se encenderá en la pantalla.

19 FUNCION PARA OBTENER INFORMACION

1 Mientras esté en la modalidad de reloj oprima "**AM/PM**" para mostrarla por 3 segundos. Una vez en la modalidad de cocinar oprima "**RELOJ**" y la pantalla mostrará el reloj y **AM/PM** por 3 segundos cada uno.
2 Mientras esté en la modalidad de temporizador la pantalla mostrará el reloj y los segundos intermitentemente al mismo tiempo. Oprima "AM/PM" para desplegar la información del temporizador por 3 segundos. Oprima "**RELOJ**" para ver la información del temporizador; la hora y AM/PM aparecerán por otros 3 segundos cada uno. Luego la unidad regresará a mostrar la hora en curso.
3 Cuando esté cocinando oprima "**ENCENDIDO**" para saber el nivel de energía de la unidad. Esta le mostrará el nivel de energía en curso por 3 segundos, luego la unidad regresará a la modalidad anterior.

20 FUNCION DE SEGURO PARA NIÑOS

Para asegurar: estando en la modalidad de espera, oprima "**PARAR/BORRAR**" poraproximadamente 3 segundos; oirá un timbre largo para indicar que está ingresando a la modalidad de seguro mientras que la pantalla mostrará

" "Para desactivar el seguro: Oprima "**PARAR/BORRAR**" por aproximadamente 3 segundos; oirá un timbre largo para indicar que está desactivando el seguro.

21 INFORMACION DE LA PANTALLA

- Mientras esté en la modalidad de espera la pantalla mostrará el reloj pero ":" no se encenderá intermitentemente.

- Si se detiene la cocción la pantalla mostrará el tiempo restante.
- Si se abre la puerta cuando la unidad está detenida o en medio de cocinar se encenderá en indicador “MICRO” mientras que “COMENZAR” se encenderá intermitentemente.

SOLUCIONES A PROBLEMAS FRECUENTES

Interferencia de la unidad recepción de TV	Puede que haya interferencia en las transmisiones de radio o TV mientras use el horno lo cual es norma.
La luz de la unidad es débil	Cuando se cocina a baja energía puede que la luz disminuya, esto es normal.
Se acumula vapor en la puerta y sale aire caliente de los orificios de ventilación	El vapor se forma al cocinar la comida y gran parte se eliminará por los orificios de ventilación mientras otra parte se acumula en la puerta; esto es normal.
Se enciende el horno accidentalmente pero no hay comida adentro	El horno puede funcionar mientras está vacío por breves periodos sin ocasionar daños pero en general evite hacerlo.

PROBLEMA	**PUEDE SE DEBA A**	**SOLUCION**
El horno no se enciende	a. El cable de energía no está enchufado b. La puerta está abierta. c. Está fijado a una operación equivocada.	a. Enchufe al tomacorriente b. cierre la puerta e intente nuevamente. c. Verifique las instrucciones
La torna mesa hace ruido cuando se enciende el horno de micro ondas	Los rodillos de descanso del torna mesa están sucios	Vea la sección de mantenimiento para limpiar las partes sucias.

PREMIER®

Microwave Oven

INSTRUCTION MANUAL

MODEL: MW-1520

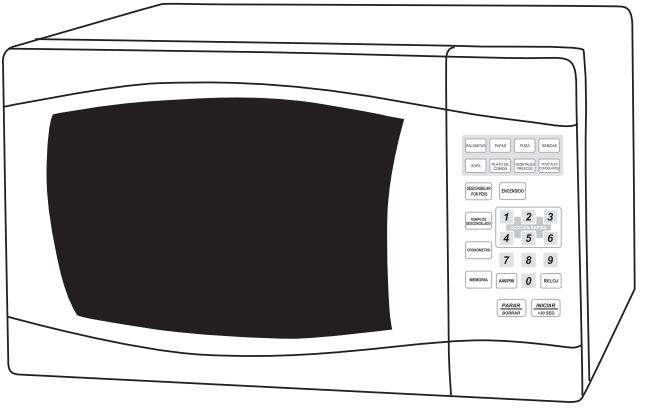

SAVE THESE INSTRUCTIONS CAREFULLY

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) DOOR (bent)

(2) HINGES AND LATCHES (broken or loosened)

(3) DOOR SEALS AND SEALING SURFACE

(d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MW-1520
Rated Voltage:	120V~ 60Hz
Rated Input Power(Microwave):	1050W
Rated Output Power(Microwave):	700W
Oven Capacity:	20 L
Turntable Diameter:	Ø 245mm
External Dimensions (WxHxD):	461X365X280mm
Net Weight:	Aprox. 11.4 Kg
Warning:	Handling the cord on this press or cords associated with accessories sold with this product, will expose you to lead a chemical known to the state of California to cause cancer, and birth defects or other reproductive harm. **Wash hands after handle.**

SAFETY

1. The oven must be on a leveled surface.
2. The turntable and turntable roller rest must be in the oven during cooking. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Incorrect use of browning dish may cause the turntable to break.
4. Use only the specified bag size when using Direct Access Popcorn.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and could cause physical injury.
9. Do not heat narrow-necked containers, such as syrup bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.
13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and again halfway through cooking time. Let stand in the oven for a short time and stir again before removing the container.
14. Use carefully when cooking food in the microwave oven to avoid burning due to excessive cooking.
15. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
16. Failure to maintain the oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read all instructions before using the appliance.
2. Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"**
3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.

If materials inside the oven ignite:

1. Keep the oven door closed.
2. Turn the oven off, and unplug the appliance.
3. Disconnect the power cord, shut off power at the fuse or circuit breaker panel.
4. Do not overcook food. Carefully attend the appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
5. Do not use the oven cavity for storage purposes. Do not store combustible items such as bread, cookies, paper products, etc. inside the oven.
6. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
7. This oven must be grounded. Connect only to properly grounded outlet. See **"GROUN-DING INSTRUCTIONS".**
8. Install or locate this oven only in accordance with the installation instructions provided.
9. Some products such as whole eggs, water with oil or fat, sealed to explode and therefore should not be heated in this oven.
10. Use this appliance only for its intended uses as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
11. As with any appliance, close supervision is necessary when used by children.
12. Do not operate this oven if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
13. This appliance should be serviced only by qualified service technicians. Contact the nearest authorized service facility for examination, repair or adjustment.
14. Do not cover or block any vents on the oven.
15. Do not store or use this appliance outdoors.
16. Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
17. Do not immerse cord or plug in water.
18. Keep cord away from heated surfaces.
19. Do not let cord hang over edge of table or counter.
20. When cleaning door and oven surfaces use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.

21. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when the container is disturbed or a spoon or other utensil is inserted into the liquid.
    i) Do not overheat the liquid.
    ii) Stir the liquid both before and halfway through heating it.
    iii) Do not use straight-sided containers with narrow necks.
    iv) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
    v) Use extreme care when inserting a spoon or other utensil into the ntainer.

SAVE THESE INSTRUCTIONS
To Reduce the Risk of Injury to Persons
Grounding Installation

DANGER

Electric Shock Hazard
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard
Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

Three-pronged (grounding) plug

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
3. If a long cord sets or extension cord is used:
   1) The marked electrical rating of the cord set or extension marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
   2) The extension cord must be a grounding-type 3-wire cord.
   3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

UTENSILS

CAUTION

Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short–term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

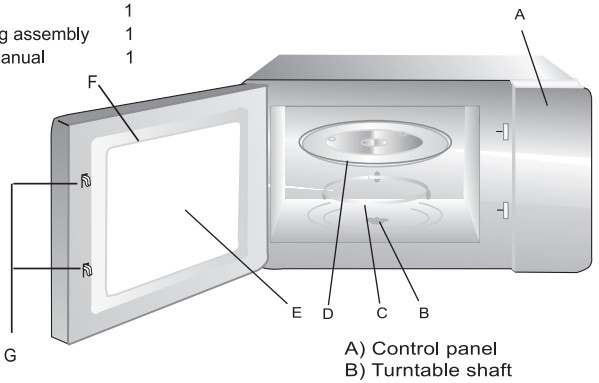

A) Control panel
B) Turntable shaft
C) Turntable ring assembly
D) Glass tray
E) Observation window
F) Door assembly
G) Safety interlock system

Turntable Installation

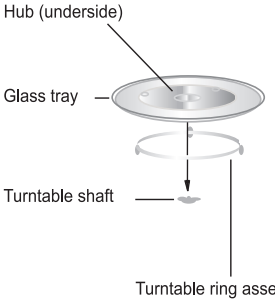

a. Never place the glass tray upside down. The glass tray should never be restricted.
b. Both glass tray and turntable ring assembly must always be used during cooking.
c. All food and containers of food are always placed on the glass tray for cooking.
d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. **Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

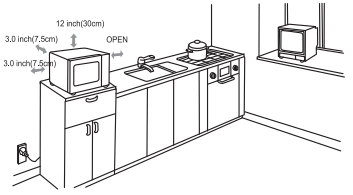

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.
(1) Leave a minimum clearance of 12 inches (30cm) above the oven.
(2) Do not remove the legs from the bottom of the oven.
(3) Blocking the intake and/or outlet openings can damage the oven.
(4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

OPERATION

Control Panel and Features

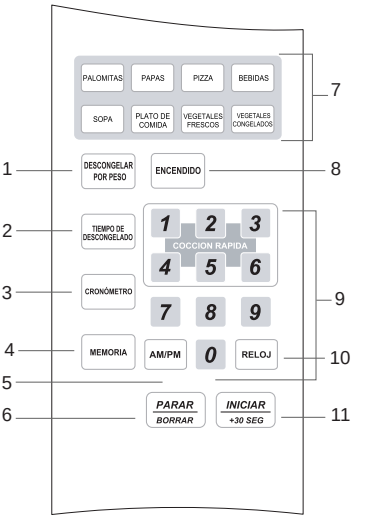

(1) DESCONGELAR POR PESO
(2) TIEMPO DE DESCONGELADO
(3) CRONÓMETRO
(4) MEMORIA
(5) AM/PM
(6) PARAR/BORRAR
(7) Auto Menu
(8) ENCENDIDO
(9) Number keys
(10) RELOJ
(11) INICIAR/+30SEG.

OPERATION

1. Power Level

Ten power levels are available.

Level	10	9	8	7	6	5	4	3	2	1
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1

Remarks: when a power between level 10-8 is chosen, the high level indicator is lighted and it will flash when in operation.
When a power between level 7-1 is chosen, the low level indicator is lighted and it will flash when in operation.

2. Clock Setting

When the microwave oven is plugged into a outlet, the oven will display " 0:00 "

(1) Press " **Reloj** ", LED will display 00:00, clock indicator will be lighted. The hour figures will flash; ":" and "0" will be lighted.

(2) Press the number keys and enter the correct time. For example, time is 10:12 now, please press **"**1,0,1,2**"** in turn.

(3) Press " **AM/PM** " to choose AM or PM. AM or PM will be selected in turn by press the button of " **AM/PM** " continuously.

(4) Press " **Reloj** " to finish clock setting, and the clock indicator will go out. ":" will be flashing and the clock will be lighted.

(5) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: In the process of clock setting, if the " **PARAR/BORRAR** " button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

3. Kitchen Timer

(1) Press " **CRONÓMETRO** ", LED will display 00:00, clock indicator will be lighted. The frist "0" will flash; ":" and the other "0" will be lighted.

(2) Press the number keys and enter the correct time.(the maximum cooking time is 99 minutes and 99 seconds)

(3) Press " **INICIAR/+30SEG.** " to confirm setting, clock indicator will be lighted.

(4) When the kitchen time is reached, clock indicator will go out. The buzzer will ring 5 times. If the clock be set(12-hour system), LED will display the current time.

Note: The kitchen Time is differ from 12-hour system,Kitchen Timer is a timer.

4. Microwave cook

(1) Keep on pressing " **ENCENDIDO** " to choose microwave power. " " and " " or " " will be lighted.

(2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.

(3) Press " **INICIAR/+30SEG.** " to start cooking, and the remained cooking time will be displayed. ":", " ", " " or " " indicators will be flashing.

Note: In the process of cooking, if the " **PARAR/BORRAR** " button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

5. Fast Starting

(1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads1 to 6. Press " **INICIAR/+30SEG** " to increase the cooking time; the maximum cooking time is 99 minutes and 59 seconds.

(2) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing " **INICIAR/+30SEG** ". Each press on the same button will increase cooking time by 30 seconds. the maximum cooking time is 99 minutes and 59 seconds.

Note: Each press on " **INICIAR/+30SEG**" can increase the cooking by 30 seconds for the microwave and Auto menu cooking. However, the operation will not work under "Weight Defrost" operation.

6. Defrosting By WT Function

(1) Press " **DESCONGELAR POR PESO.** ", LED will display "dEF1"; when at the same time " ", " " indicators will be lighted.

(2) Press numerical pads to input weight to be defrosted. "Oz" indicator will be lighted. Input the weight ranged between 4~100 Oz.

(3) If the weight input is not within 4~100, the input will be invalid. No "beep" will be sound and the microwave will not work until valid numbers are input .

(4) Press "**INICIAR/+30SEG.** " to start defrosting and the remained cooking time will be displayed. ":", " " and " " indicators will be flashing and the "Oz" indicator will go out.

7. Time Defrost Function

(1) Press " **TIEMPO DE DESCONGELADO** ", LED will display "dEF2". At the same time, " ", " " indicators will be lighted.

(2) Press number pads to input defrosting time. The effective time range is 00:01~99:99

(3) If the time input is not within 00:01~99:99, no "beep" will be sound and the microwave will not work until valid numbers are input.

(4) The default microwave power is power level 3. If you want to change the power level, press " **ENCENDIDO** " once, and the LED will display "PL 3", then press the number pad of the power level you wanted.

(5) Press " **INICIAR/+30SEG .** " to start defrosting. The remained cooking time will be displayed. ":", " " and " " indicators will be flashing.

8. POPCORN

a) Default mode

1) Press " **PALOMITAS** " to select popcorn mode, " " " " and "**Oz**" are light. "**1.75**" "**3.0**" "**3.5**" appears in the display.
2) Press " **INICIAR/+30SEG.** " to start cooking, the buzzer will ring once, "Oz" will go out, " " " " will flash.
3) When the cooking is over, the buzzer will ring 5 times, LED will display "0:00". If the clock be setted(12-hour system), LED will display the currently time.

b) Cooking-time adjustable mode

1) Press " **PALOMITAS** " to select popcorn mode, " " " " and "**Oz**" are light. "**1.75**" "**3.0**" "**3.5**" appears in the display.
2) Press " **MEMORIA** " , LED will display the cooking time of the weight, the minute figure is flashing.
3) Press the number keys and enter the time.
4) Press " **MEMORIA** " to save the setting.If straight press " **INICIAR/+30SEG.** ", the oven will to cook with the amended cooking time. " " " " will flash.

Users can change the cooking time

e.g.: Users set " **PALOMITAS** " time for 3 minutes and 15 seconds

1) Press" **PALOMITAS** " button once or twice when the oven is on call (the screen will display "1.75" for once press and "3.0" for twice), then press "**MEMORIA**" button, LED screen will display the default cooking time of current food weight (which is not 0:00), for example 1'30". on the screen the first number 1 glints, press nember button to input 3; the second number 3 glints, press number button to input 1; the third number 0 glints, press number button to input 5.and then the first number 3 glints again (It is similar as clock setting).
2) Press "**MEMORIA**" again to save current setting. If press "**INICIAR/+30SEG.**" to begin cooking directly, the program will save the latest setting of cooking time automatically.
3) To change the set cooking time, repeat step 1), the screen will firstly display the saving time (3:15 for example), press number button to reset cooking time, and the follow step 2).
4) When completed, whenever press " **PALOMITAS** " button, screen displays food weight 1.75 , 3.0 or 3.5, only cooking time follows the saved time setting.
5) To go back to initialization, press " **PALOMITAS** " button for more than three seconds, the buzzer will sound, then go back to initial setting.

9.POTATO

a)Press " **PAPAS** " repeatedly until the number you wish appears in the display,
" " " " light.
"1"SET: 1 potato (approximate 230 gram)
"2"SET: 2 potatoes (approximate 460 gram)
"3"SET: 3 potatoes (approximate 690 gram)
For example, press "PAPAS" once : "1" displays.

b) Press " **INICIAR/+30SEG.** " to cook, " " " " are flashing, time counts down.

Times(Press "PAPAS")	Weight	Display
Once	1set	
Twice	2set	
Thrice	3set	

10. PIZZA

a) Press " **PIZZA** " repeatedly until the number you wish appears in the display, " " " " light.

You can reheat 1~3 slices of Pizza each time **.**

Times(Press "Pizza")	Weight	Display
Once	1(about 3.0 Oz)	
Twice	2(about 6.0 Oz)	
Thrice	3(about 9.0 Oz)	

For example, press" **PIZZA** " twice, "2" appears in the LED.

b) Press **" INICIAR/+30SEG ."** to cook, " " " " are flashing, time counts down.

11.BEVERAGE

a) Press " **BEBIDAS** " repeatedly until the number you wish appears in the display, " " " " ", " " light.

You can reheat 1~3 cups of beverage each time (approximate 250 ML).

For example, press "**BEBIDAS**" twice, "2"appears in the display.

b) Press " **INICIAR/+30SEG.**" to cook,

" " " " " are flashing, time counts down.

Times(Press "BEBIDAS")	Weight	Display
Once	1 Mug	
Twice	2Mugs	
Thrice	3Mugs	

12.SOUP

a) Press " **SOPA** " repeatedly until the number you wish appears in the display, " " " " **"Oz"** light.

For example, press "**SOPA**" twice, "8.0"appears in the display.

b) Press " **INICIAR/+30SEG.**" to cook,

" " " " **" light**, time counts down.

Times(Press "SOPA")	Weight	Display
Once	4.0 Oz	
Twice	8.0 Oz	
Thrice	12.0 Oz	
4 times	16.0 Oz	

13. DINNER PLATE

a) Press " **PLATO DE COMIDA** " repeatedly until the number you wish appears in the display, " " " " and "Oz" light.
For example, press" **PLATO DE COMIDA** " twice, "12.0" appears in the display.

b) Press " **INICIAR/+30SEG.** " to cook, " " " " are flashing, time counts down.

Times(Press "PLATO DE COMIDA")	Weight	Display
Once	9.0 Oz	
Twice	12.0 Oz	
Thrice	18.0 Oz	

14.FRESH VEGETABLE

a) Press " **VEGETALES FRESCOS** " repeatedly until the number you wish appears in the display, " " " " and "Oz" light.
For example, press " **VEGETALES FRESCOS** " twice, "8.0" appears in the display.

b) Press " **INICIAR/+30SEG.** " to cook, "Oz" disappears, " " " " are flashing, time counts down.

Times(Press "**VEGETALES FRESCOS**")	Weight	Display
Once	4.0 Oz	
Twice	8.0 Oz	
Thrice	16.0 Oz	

15.FROZEN VEGETABLE

a) Press " **VEGETALES CONGELADOS** " repeatedly until the number you wish appears in the display, " " " " and "Oz" light.
For example, press " **VEGETALES CONGELADOS** " twice, "8.0" appears in the display.

b) Press " **INICIAR/+30SEG.** " to cook, "Oz" disappears, " " " " are flashing, time counts down.

Times(Press "**VEGETALES CONGELADOS** ")	Weight	Display
Once	4.0 Oz	
Twice	8.0 Oz	
Thrice	16.0 Oz	

16. PRE-SET FUNCTION

(1) Set the clock first. (Consult the instruction of clock setting.)
(2) Set a certain cooking procedure(one or two blocks), the setting method and display are same as relevant cooking procedure. (Defrosting is beyond pre-set cooking).
(3) Press " **RELOJ** " to display current time and hour figure is flashing, the icon " **:** " and other " **0** " keep lighting on.
(4) Press number keys to input the cooking time.For example: to set the time is 12:12, you can press the number keys "1","2","1","2" in order.
(5) Press " **AM/PM** " to choose AM or PM. AM or PM will be selected in turn by press the button of " **AM/PM** " continuously.
(6) Press "**INICIAR/+30SEG.**" to confirm the preset procedure.When it is confirmed, the unit will go back the clock states.
(7) Cooking will begain when time arrives.

17. MEMORY FUNCTION

(1)Press "**MEMORIA**" to choose memory 1-5 procedure. The LED will display 1,2,3...5.
(2) If the procedure has been set, press " **INICIAR/+30SEG.**" to use it. If not, continue to set the procedure. Only one or two stages can be set.
(3) After finishing the setting, press "**MEMORIA**" to save the procedure and turn back to the waiting states.If press " **INICIAR/+30SEG.**" ,it can save and operate the setting.
Note: Auto menu cooking cannot be set as memory procedure.

18. MULTI-STAGE COOKING

This microwave oven can be set with 2 stages cooking.
Example: To defrost beef of 40 oz first and then cook with full power for 10 minutes.
1) Press "**DESCONGELAR POR PESO**" to choose defrost by weight function;
2) Press "4","0" in sequence;
3) Press "**ENCENDIDO**" once to choose full power;
4) Press "1","0","0","0" in sequence;
5) Press "**INICIAR/+30SEG**." to start cooking.
Note: (1) Time defrost and auto function cooking can't be set as one of the 2 stages cooking.
(2) Weight defrost can be set as the first stage cooking only.

19. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press " **PARAR/BORRAR** " for 3 seconds, there will be a long "beep" denoting the entering the children-lock state; meanwhile, LED will display " "

Lock quitting: In locked state, press " **PARAR/BORRAR** " for 3 seconds, there will be a long "beep" denoting that lock is released.

20. INQUIRING FUNCTION

(1) In clock state, press " **AM/PM** " to display "**A**" or "**M**" for 3 seconds.
In cooking state, press " **RELOJ** ", the LED will display clock for three seconds and the "**A**" or "**M**" for another 3 seconds.

(2) In pre-set state, LED will display the clock and the seconds will be flashing at the same time. Press " **AM/PM** " and "**A** " or "**M**" will be displayed for 3 seconds. Then press " **RELOJ** " to inquire the pre-set time. The pre-set time will be flashing for 3 seconds, then "**A**" or "**M**" will be displayed for another 3 seconds. After that, the oven will turn back to the clock state.

(3) In the microwave cooking state, press " **ENCENDIDO** " to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In the level 2 cooking state, the inquiring way can be done by the same way as above.

21. COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished.

22. OTHER SPECIFICATIONS

(1) In standby state , if the set clock digital tube displays current time, the " **:** " would flash; otherwise, it shows " **0:00** ".

(2) In setting function state, LED displays corresponding setting.

(3) In working or pause state, LED displays remainded cooking time.

(4) During working, if it pauses or opens the oven door, " " would light on, after restarting, it will flash constandtly.

(5) After setting a procedure, if there are no any operation in 5 minutes, it would exit setting status.

(6) Refer to the sample for other details.

Maintenance

Troubleshooting

Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions.
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitble. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level.
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.